## **Product Information - LB**

## SANITARY BY DESIGN

LIFE SCIENCES

FOOD

# "LB" Point Level Probes for Conductive Liquid Applications

## Introduction

The LB Point Level probe assemblies are designed to provide long-term reliability in applications where they are continuously exposed to wide temperature swings and repeated CIP cycles. The LB utilizes a new process developed to seal Teflon® insulation to stainless steel probes providing a smooth, thick, permanent coating that's impervious to conditions encountered in sanitary processing and CIP applications. To simplify installation the LB incorporates an elastomer between the Teflon® and the probe that allows any probe to be shortened by up to six inches in the field.

Switching modules are connected to the probes via a water-tight Quick Disconnect. The module provides Form-C relay contacts for switching or alarming and is supplied with Single Pole/Double Throw (SPDT) contacts. Modules are designed for single level or differential operation and are available in fixed or field adjustable sensitivity. A NEMA 4X enclosure may be specified for mounting the switching module local to the probe.


The LB also features a second proprietary, elastomeric compression seal at the top of each probe to insure a sanitary seal is maintained at the probe-to-fitting junction. No threads exist within or near the product contact zone.

Finally, the LB integrates a stainless steel wiring head that simplifies field wiring and retro-fits to existing electronic controls. The head and fitting assembly can support up to 4 individual probes, plus a separate tank reference connection.

The housing includes a pre-wired and sealed quick-disconnect receptacle and can be specified with a field wireable mating connector or with any length of pre-wired cable.

The quick disconnect even meets NEMA 4X requirements in the disconnected position!

Ordering information can be found within this brochure or by visiting our website at www.anderson-negele.com.

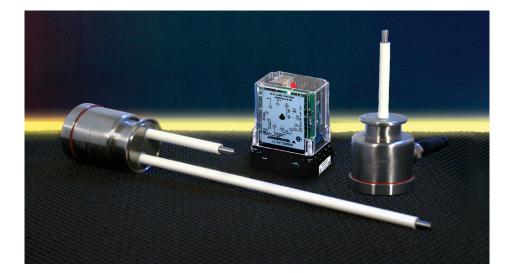


### Features

- Long-Term sterility and cleanability via:
- all new patent-pending compressed elastomeric seal between the probe and Teflon® coating
- Proprietary elastomric compression seal at the probe-to-fitting junction
- Integrated stainless steel head makes retrofits simple
- Water-tight quick-disconnect includes pre-wired tank ground reference
- Up to four probes per fitting for multiple level applications
- Rated for Process temperatures from 30°F (-1°C) to 200°F (94°C).

## Applications

- HTST Balance Tanks
- Cream Balance Tanks
- · CIP System Tanks
- · Silo High Level Alarm
- Any Atmospheric Tank Containing a Conductive Fluid

2

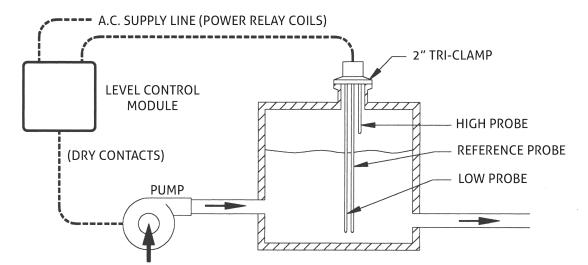

The drawing illustrates a typical control system installation handling a "pump-up" (inverse) operation. In this arrangement the pump starts when the liquid drops below the low probe and stops when the liquid touches the high probe for the purpose of replenishing liquid drawn from the vessel. The level varies but is maintained within the limits established by the tips of the probes. A "pump-down" (direct) application is opposite, with the pump starting at the high level and removing liquid from the tank until the low level probe is clear of liquid.

## **Typical Fluids: Average Sensitivity**

Liquid or Material	Sensitivity (Ohms/cm)	Liquid or Material	Sensitivity (Ohms/cm)
Baby Foods	1K	Mustard	1K
Beer	2.2K	Oil-Soluble	10K
Bourbon	200K	Soap Foam	18K
Buttermilk	1K	Soups	1K
Cake Batter	5K	Starch Solutions	5K
Catsup	2.2K	Sugar Solutions	90K
Cream	1K	Vinegar-Aqueous	2.2K
Cream (foam)	4.7K	Water	
Coffee	2.2K	Carbonated	3K
Corn Syrup	45K	Condensate	18K
Corn-Cream Style	2.2K	Chlorinated	5K
Jams/Jellies	45K	Distilled	450K
Juices-Fruit/Vegetal	ole 1K	De-ionized	2.0M
Mayonnaise	5K	Hard/Natural	5K
Milk	1K	Wine	2.2K
Molasses	10K		

Note: Included adjustable 4.7K ohm sensitivity to sense foam.

## **Specifications**

Physical Specificatio	ns:	Recommended Cable: 18-24 AWG, foil shielded, and		
Wetted Material:	316L Stainless Steel, Teflon,	PVC coated.		
	Silicone			
Wetted Material Surf	face Finish:	Process Limits:		
	Ra max = 25 micro	30°F to 200°F (-1°C to 94°C)		
	inches (.6 microns)	Vacuum or vented non-pressurized vessels		
Housing Material:	304 Stainless Steel			
Housing Ratings:	NEMA 4X, IP-66	Standards:		
Electrical Connection	ns: 5 pin M12 Quick Disconnect	Designed and manufactured to sound engineering practices in		
	Receptacle	accordance with Article 3.3 of the PED 97/23/EC		

#### **Order Information**

							_
PROB	E ASSEMBLIES	L B					
C B D E	BODY (FITTING) STYLE 1-1/2" Tri-Clamp <sup>1</sup> 2" Tri-Clamp 2-1/2" Tri-Clamp 3" Tri-Clamp				ידי ד ו		-
0 1 2 3 5	SENSOR WIRING Quick Disconnect Receptacle(QDR) QDR w/ connector (field wireable) QDR w/25 ft 5-Conductor Molded Cordset QDR w/50 ft 5-Conductor Molded Cordset QDR w/100 ft 5-Conductor Molded Cordset						
1 2 3 4 5	NUMBER OF PROBES One (1) Probe Two (2) Probes Three (3) Probes Four (4) Probes One (1) Probe offset <sup>3</sup>		t1	#2	#3	#4	
т	PROBE COATING Teflon®		PROBE #	PROBE ∉	PROBE ∉	PROBE <i>≱</i>	
	PROBE LENGTH <sup>2</sup> (Probes 1-4)						

- None 3" long 6" long 12" long 18" long 24" long 30" long 42" long 42" long 54" long 60" long 66" long 72" long 00
- 03 06

- 12 18 24 30 36 42
- 48
- 54
- 60
- 66 72

- NOTES:
- 1-1/2" Tri-Clamp available with 1 or 2 probes only. 1.
- All standard probe lengths listed are available at standard lead-times. Probes may be specified to the nearest whole inch between 3" and 72" by simply inserting the length in the part number. Allow an extra three days for delivery. 2.
- 3. Offset probe is available for 1-1/2" and 2" Tri-Clamp only. Probe offset from fitting centerline: 1-1/2" = 0.34" 2" = 0.58"

## **ON/OFF SWITCHING MODULES**

16VMZ1M0 SPDT w/ Adjustable Sensitivity (11 pin) Adjustable Sensitivity (Inverse) (Direct replacement for old part number LL3Z100000)

## 16VMY1M0

SPDT w/ Adjustable Sensitivity (11 pin) Adjustable Sensitivity (Direct) (Direct replacement for old part number LL3Y100000)

#### Note:

800 ohm low sensitivity Relay Modules are discontinued. Some multiple probe applications may require more than one Relay Module. Contact the Technical Service Department at 1-800-833-0081.

FOOD LIFE SCIENCES 4
----------------------

05037 / 2.1 / 2022-04-01 / PW / NA

ANDERSON INSTRUMENT COMPANY 156 Auriesville Road Fultonville, NY 12072 Phone 800-833-0081 Fax 518-922-8997 info@anderson-negele.com Tech. Support: techservice@anderson-negele.com Phone 800-833-0081